

# REFERENCE BULLETIN

## OIL LEVEL INSPECTION WITH DIPSTICK



REF 005

### Oil level inspection with Dipstick Plunger Pump 7CP series.

 
 
 
Cat Pumps has redesigned our dipstick to improve oil level measurement in the 7CP plunger pumps. The new dipstick is longer and does not require threading dipstick completely in to read the oil level. Also note the dipstick color has changed from light blue to white.

#### Proper method for checking crankcase oil level: (Pump should NOT be operating!)

1. Remove dipstick by hand by turning counter clockwise.
2. Ensure rubber gasket is under the head of the dipstick and is not damaged. Replace if necessary.
3. Wipe the tip of the dipstick with a clean cloth to remove oil.
4. Re-insert dipstick into the hole – **DO NOT THREAD IN.**

**Note: threading the dipstick into crankcase cover will give a false reading of actual amount of oil in the crankcase.**

5. Remove dipstick.
6. Correct oil level should be between the cross marks on end of dipstick.
7. Hand thread dipstick in a clockwise direction.  
Do not over tighten.

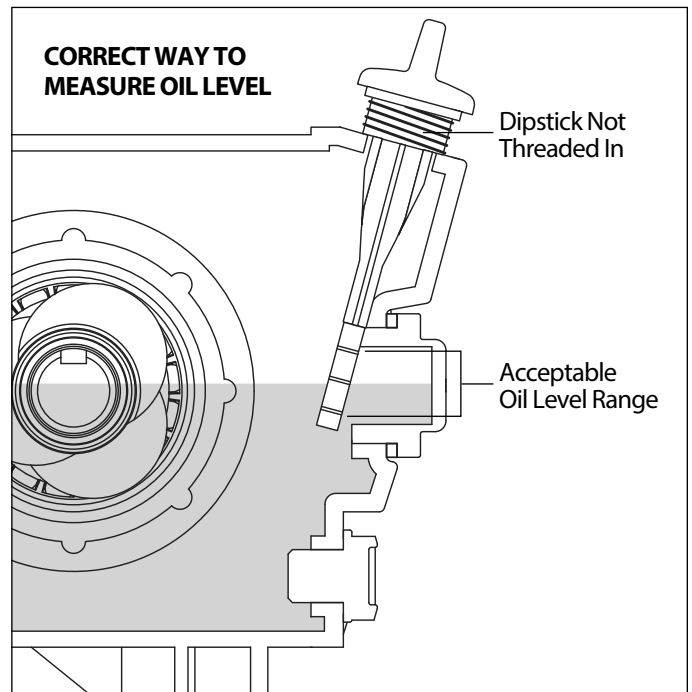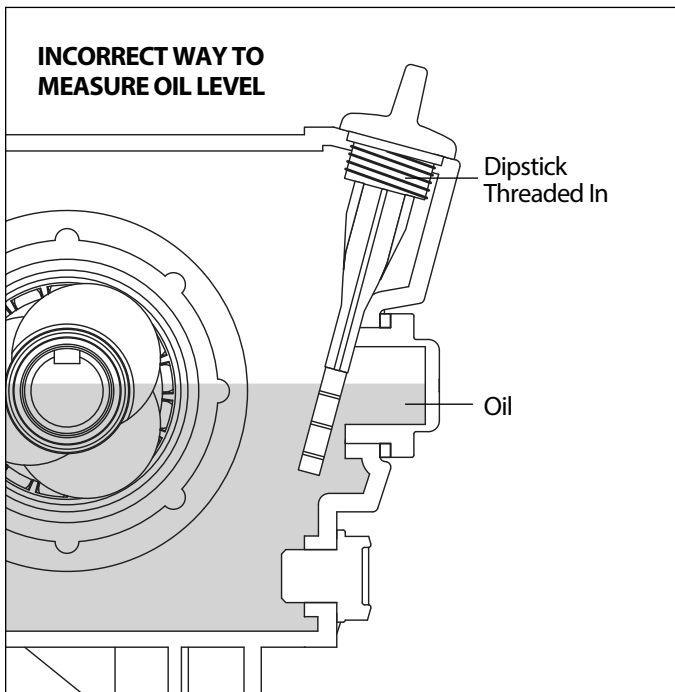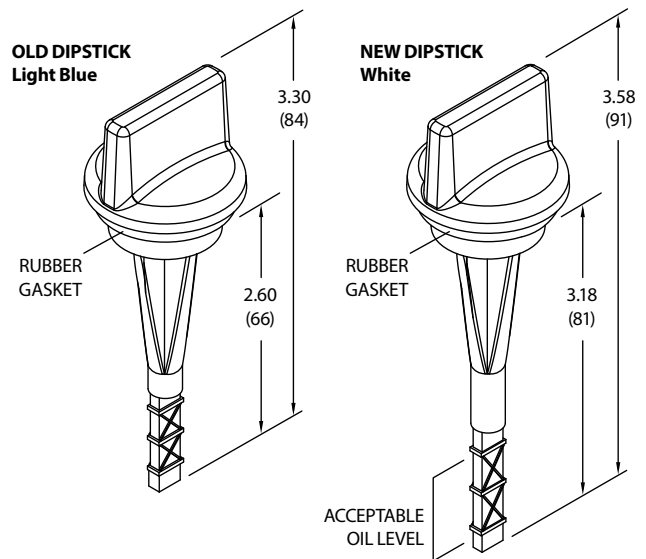



**CAT PUMPS**

1681 - 94TH LANE N.E. MINNEAPOLIS, MN 55449-4324  
PHONE (763) 780-5440 — FAX (763) 780-2958  
e-mail: [techsupport@catpumps.com](mailto:techsupport@catpumps.com)  
[www.catpumps.com](http://www.catpumps.com)

For International inquiries go to [www.catpumps.com](http://www.catpumps.com) and navigate to the "Contact Us" link.

©2015 Cat Pumps Inc. All rights reserved. All written and visual data contained in this document are based on the latest product information available at the time of publication. Cat Pumps reserves the right to make changes at any time without notice. All other brand names or marks are used for identification purposes and are trademarks of their respective owners.