# DATA SHEET DUAL LANCES



Stainless Steel

33200

Model:

33201

Model:

**Zinc Plated** 



33200 Model Shown

SPECIFICATIONS	U.S.	Metric				
MODEL 33200						
Maximum Flow	10.5 gpm	40 lpm				
Maximum Pressure	3650 psi	250 bar				
Maximum Temperature	320° F	160° C				
Inlet Fitting	1/4" BSP(M)	1/4" BSP(M)				
Nozzle Fitting (2)	1/4" NPT(F)	1/4" NPT(F)				
Weight	47.2 oz	1.34 kg				
Overall Length	47.2"	1090 mm				
MODEL 33201						
Maximum Flow	10.5 gpm	40 lpm				
Maximum Pressure	3650 psi	250 bar				
Maximum Temperature	320° F	160° C				
Inlet Fitting	1/4" BSP(M)	1/4" BSP(M)				
Nozzle Fitting (2)	1/4" NPT(F)	1/4" NPT(F)				
Weight	44.8 oz	1.27 kg				
Overall Length	35"	890 mm				

Use only at above specifications to ensure proper gun life and performance.

# **FEATURES**

- Ventilated square nylon insulator provides comfort and safety during operation.
- Rotating handle allows for easy switching between high and low-pressure nozzles.
- · Optional lengths for specialized cleaning.
- Ideal for use with an adjustable chemical injector.

# **SELECTION**

Select a lance to match the system flow, pressure requirements, temperature, and application. Select zinc plated or stainless steel to meet chemical compatibility requirements.


## **INSTALLATION**

Install these single lances to any ¼" fitted gun. Use PTFE thread tape or pipe thread sealant to ensure leak proof. Thread a high-pressure nozzle into one side of the nozzle holder. Thread a low-pressure nozzle into the other side of the nozzle holder.

#### **OPERATION**

Fluid flow through the lance occurs by squeezing the trigger on the gun. Rotate the front handle to switch flow between the two different nozzles in the nozzle holder.

#### **EXPLODED VIEW**

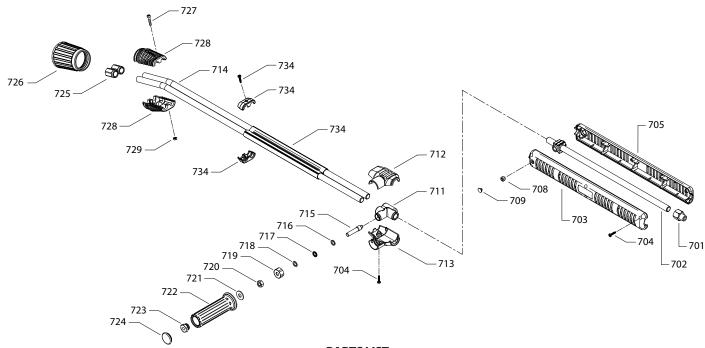

## **PARTS LIST**

ITEM PART NUMBER DESCRIPTION				QTY
701	32368	BB	Adapter (1/4" BSP[M])	1
702		SS	Tube (1/4") Model 33200	1
	_	ZP	Tube (1/4") Model 33201	1
703	_	NY	Cover, Lance (Left)	1
704	_	STZP	Screw, Self Tapping (M3 x 18)	8
705	_	NY	Cover, Lance (Right)	1
706	_	BB	Frame, Cover	1
708	32870	STZP	Screw, Cover (M10 x 8)	1
709	32871	NY	Plug, Cover	1
711	_	BB	Housing	1
712	_	NY	Insulator, Lance (Upper)	1
713	_	NY	Insulator, Lance (Lower)	1
714	_	SS	Tube (1/4") Model 33200	2
	_	ZP	Tube (1/4") Model 33201	2
715	_	S	Valve, Needle	1
716	_	STZP	Spacer, Valve	1
717	_	FPM	O-Ring	1
718	32873	PTFE	Backup Ring	1

Italics are optional items. R Components comply with RoHS Directive.

MATERIAL CODES (Not Part of Part Number):

BB=Brass FPM=Fluorocarbon NBR=Medium Nitrile (Buna-N) NY=Nylon

PTFE=Pure Polytetrafluoroethylene RBR=Rubber S=304SS SS=316SS

STL=Steel STZP=Steel/Zinc Plated ZP=Zinc Plated

ITEM PART NUMBER DESCRIPTION QT				QTY
719	_	BB	Nut (M18)	1
720	126521	STZP R	Nut (M18 x 1.25)	1
721	_	STZP	Washer (M18)	11
722	_	NY	Handle	1
723	_	BB	Plug, Handle	11
724	_	NY	Plug, Grip	11
725	32053	STZP	Holder, Nozzle (1/4" NPT[F])	2
726	_	RBR	Guard, Nozzle	11
727		STL	Screw (M4 x 20)	2
728	_	NY	Protector Extension	2
729		STL	Nut (M4)	2
734	_	_	Kit, Clamp	1
735	32864	NY	Guard, Nozzle assembly (Includes: 726–729)	1
736	32865	_	Insulator, Assembly (Includes: 703–706)	1
737	32867	_	Cover, Housing, Assembly (Includes: 704, 712, 713)	1
738	32866	NY	Handle, Assembly (Includes: 715–724)	1
740	39012	NBR	Kit, O-Ring (Includes: 716, 717, 718)	1

# **TROUBLESHOOTING**

Water leaking at fitting connection	Check fitting for proper sealant and reconnect to gun
Water leaking at nozzle	Check nozzle holders for proper sealant and reconnect
Broken nozzle protector	Replace to ensure nozzle life

## **△ WARNING**

#### SKIN PUNCTURE HAZARD

Do not allow spray to contact any part of the body or animals. Pumped liquids under high pressure can pierce skin and underlying tissue or can deflect debris leading to serious personal injury or death.

- 1. Relieve all line pressure in the inlet line to the pump and discharge line from the pump before performing any maintenance on the gun.
- 2. When high-pressure gun is not in use, set safety trigger lock (safety latch) to avoid accidental high-pressure operation and personal injury or property damage.
- 3. Do not check for leaks with hand. Use a piece of cardboard to check for leaks.
- 4. Review cleaning procedures to minimize heavy back blasting.
- 5. Wear adequate safety equipment and clothing when operating a high-pressure sprayer. Never use high-pressure spray with bare feet or exposed skin, and always wear safety glasses.

#### **△ CAUTIONS AND WARNINGS**

All high-pressure systems require a primary pressure regulating device (e.g. regulator, unloader) and a secondary pressure relief device (e.g. pop-off valve, relief valve). Failure to install such relief devices could result in personal injury or damage to pump or property. Cat Pumps does not assume any liability or responsibility for the operation of a customer's high-pressure system. Read all CAUTIONS and WARNINGS before commencing service or operation of any high-pressure system. The CAUTIONS and WARNINGS are included in each Service Manual and with each Accessory Data sheet. CAUTIONS and WARNINGS can also be viewed online at www.catpumps.com/dynamic-literature/cautions-and-warnings or can be requested directly from Cat Pumps.

#### WARRANTY

View the Limited Warranty online at www.catpumps.com/literature/cat-pumps-limited-warranty