DATA SHEET HIGH-PRESSURE RELIEF VALVE



Standard Model: 7190



FEATURES

- Functions as a secondary pressure relief valve to either an unloader or regulator for optimum system overpressure protection.
- By-passes unused flow when set relief pressure is reached to avoid excessive pressure on the pump.
- Lightweight, compact design conveniently mounts directly into the discharge line.

SPECIFICATIONS	U.S. Measure	Metric Measure
Flow Range	0-6.5 gpm	0-25 lpm
Pressure Range	400-5000 psi	28-345 bar
Maximum Relief Setting	5500 psi	379 bar
Maximum Temperature	140° F	60° C
Inlet Port	3/8" BSP(F)	3/8" BSP(F)
Discharge Port	3/8" BSP(F)	3/8" BSP(F)
By-Pass Port	3/8" BSP(F)	3/8" BSP(F)
Weight	16.8 oz	0.47 kg
Dimensions	5.22 x 1.97 x 1.06"	132.5 x 50 x 27 mm

SELECTION

Select a relief valve to meet or exceed the flow and pressure requirements of the system.

INSTALLATION

The relief valve should be mounted in the discharge line **before any other accessories in the system** to provide optimum protection to the pump. The by-pass from the relief valve may be returned to the reservoir or drain to the floor. By-pass returned to the inlet of the pump should be done with caution to avoid pressure spikes or excessive heat build-up from recirculating liquids.


OPERATION

The hex adjustment cap is located at the top of the relief valve, the inlet and discharge ports are located on the sides and the by-pass port is located at the bottom. Using a 27mm wrench, the pressure setting may be increased by turning clockwise or decreased by turning counterclockwise.

The relief valve should be set in small increments. Check your pressure gauge following each adjustment. It is recommended to set your primary and secondary relief valve simultaneously in small increments. The final adjustment for the secondary relief valve should be set to relieve at approximately 200 psi above the system working pressure.

NOTE: The Relief Valve is a secondary safety device. It does not replace a pressure regulator or unloader.

EXPLODED VIEW

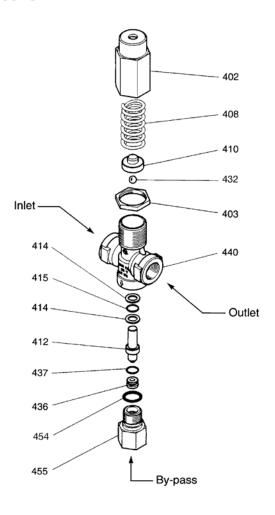

PARTS LIST

DESCRIPTION	P/N	MATL	QTY
Cap, Adjusting	33404	BB	1
Nut, Lock	33327	BB	1
Spring	33329	STZP	1
Retainer, Spring	33408	BB	1
Piston	33409	S	1
Backup-Ring, Piston	_	PTFE	2
O-Ring, Piston	_	NBR	1
Ball, Guide 1/4"	33825	SS	1
Seat	33383	S	1
O-Ring, Seat	_	FPM	1
Valve Body	_	BB	1
O-Ring, Fitting	_	NBR	1
Fitting, By-pass	33405	BB	1
Kit, O-Ring (Inclds: 414,415,437,454)	33435	NBR	1
	Cap, Adjusting Nut, Lock Spring Retainer, Spring Piston Backup-Ring, Piston O-Ring, Piston Ball, Guide 1/4" Seat O-Ring, Seat Valve Body O-Ring, Fitting Fitting, By-pass	Cap, Adjusting 33404 Nut, Lock 33327 Spring 33329 Retainer, Spring 33408 Piston 33409 Backup-Ring, Piston — O-Ring, Piston — Ball, Guide 1/4" 33825 Seat 33383 O-Ring, Seat — Valve Body — O-Ring, Fitting — Fitting, By-pass 33405	Cap, Adjusting 33404 BB Nut, Lock 33327 BB Spring 33329 STZP Retainer, Spring 33408 BB Piston 33409 S Backup-Ring, Piston — PTFE O-Ring, Piston — NBR Ball, Guide 1/4" 33825 SS Seat 33383 S O-Ring, Seat — FPM Valve Body — BB O-Ring, Fitting — NBR Fitting, By-pass 33405 BB

Italics are optional items.

Material Codes (Not Part of Part No.):

BB=Brass FPM=Fluorocarbon NBR=Medium Nitrile (Buna-N)

PTFE=Pure Polytetrafluoroethylene S=304SS SS=316SS

STZP=Steel/Zinc Plated

TROUBLESHOOTING

Valve chatters	Valve is improperly set. Repeat adjustment procedure.
Valve continually by-passes	Seat or piston valve is worn. Replace as needed.
Leaking out the top of valve	O-Ring on piston worn or cut. Replace as needed.

△ CAUTIONS AND WARNINGS

All High Pressure Systems require a primary pressure regulating device (i.e. regulator, unloader) and a secondary pressure relief device (i.e. pop-off valve, relief valve). Failure to install such relief devices could result in personal injury or damage to pump or property. Cat Pumps does not assume any liability or responsibility for the operation of a customer's high pressure system.

Read all CAUTIONS and WARNINGS before commencing service or operation of any high pressure system. The CAUTIONS and WARNINGS are included in each service manual and with each Accessory Data sheet. CAUTIONS and WARNINGS can also be viewed online at www.catpumps.com/cautions-warnings or can be requested directly from Cat Pumps.

WARRANTY

View the Limited Warranty on-line at www.catpumps.com/warranty.



CAT PUMPS

1681 - 94TH LANE N.E. MINNEAPOLIS, MN 55449-4324 PHONE (763) 780-5440 — FAX (763) 780-2958 e-mail: techsupport@catpumps.com www.catpumps.com